



# **INSTALLATION INSTRUCTIONS**

**ET4-7.3S ET4-7.4S WC FLUSH VALVE  
3 Star & 4 Star WELS Rated**

**Thank you for purchasing this Enviro-Tech product**

# INSTALLATION INSTRUCTIONS ET4-7



- >Fix WC flush valve box and face plate into wall.
- >Always flush pipe work before installation.
- >Connect water feed to inlet of valve.
- >Connect outlet to air gap fitting.
- >Connect flush pipe from air gap fitting to WC pan.
- >Insert batteries to DC battery box.
- >Connect battery box to transformer. (If mains powered)
- >Connect transformer (battery box if DC only) to face plate.
- >Connect solenoid valve to face plate plug.
- >Connect transformer to power.

(Note: The flush volumes for 3 Star WELS of 3.0ltr half flush and 6.0ltr full flush and 4 Star WELS of 2.8Ltr and 4.5ltr are preset at the factory using 350-400kPa dynamic flushing pressure. If necessary adjust flow volume with flow valve adjuster.)

## TECHNICAL SPECIFICATION

Function	ET4-7
Power Input	DC:6V(4x1,5V AA alkaline battery) AC:220-240V (50/60 Hz)
Power consumption	Static:<4Ma,active:<500mA
Water Pressure	350kPa-500kPa (recommended 350-400kPa)
Inlet/outlet Diameter	25mm G1"
Detection zone	750mm-800mm adjustable
Confirmation time	5 seconds
Low power consumption	4 AA alkaline batteries 108,000 cycles
Flush type time	Less than 90 Seconds ½ flush more than 90 seconds full flush
Trap seal protection	Automatic flush every 24hrs if not used

# INSTALLATION DRAWINGS

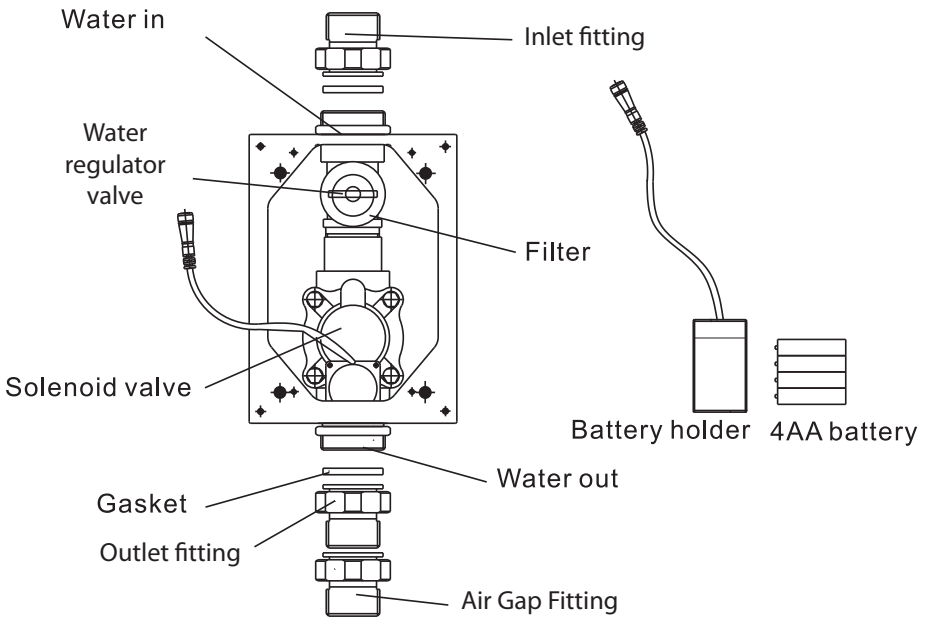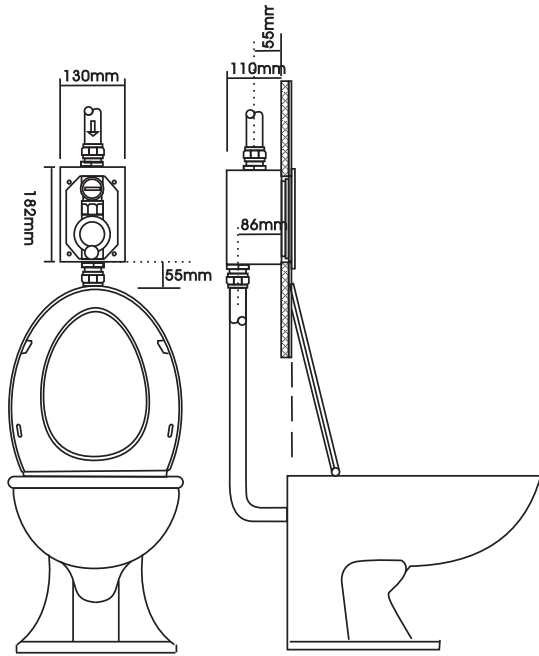

## TROUBLE SHOOTING

Problem	Possible Cause	Solution
No Water	No power	Check power supply and batteries are installed
	Water supply cut off	Check water supply
	low Water pressure	Increase water pressure
Low flush volume	Blocked filter	Clean filter
	Low Water pressure	Increase water pressure
	Low flush volume	Adjust flow valve
High flush volume	Blocked filter	Clean filter
	High flush volume	Adjust flow valve
	High water pressure	Decrease water pressure
Continual flushing	Sensor obstructed	Clear obstruction
Indicator light off	Batteries flat	Replace batteries
	Bad connection	Check connection



### AFTERCARE

Whilst advanced plating techniques are used in the manufacture of this product, the surface will be affected if cleaned incorrectly.

Surfaces should be maintained using a clean damp cloth, no abrasive agents or materials should be used or come into contact with the surface finish, or this will invalidate your guarantee

Please contact manufacturer if required

Australia: 1300 530 883

New Zealand: 0800 2 ENVIRO

This automatic WC flush valve is manufactured strictly to adhere to the ISO9001 standard,

WaterMark certification and WELS standards.

Enviro-tech has the right of updating the product technology.

