




Enviro-Tech

INSTALLATION INSTRUCTIONS

ELITE BENCH MOUNTED SENSOR TAP

ET2-32

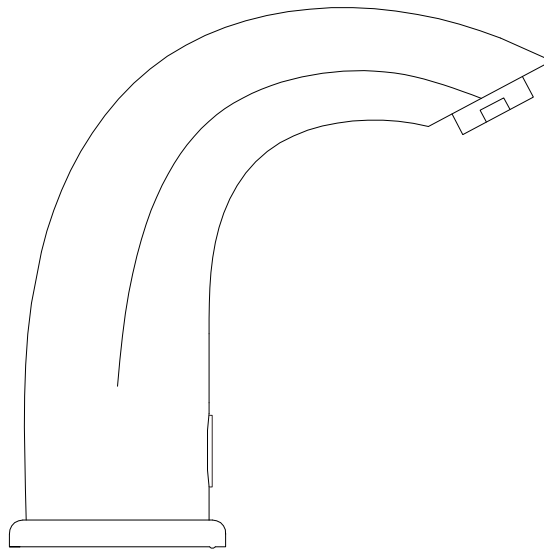

Thank you for purchasing this Enviro-Tech product







INSTALLATION INSTRUCTIONS ELITE TAPWARE BENCH MOUNTED

We strongly recommend that you use a qualified and registered plumber and electrician. You must ensure that all pipe work is flushed adequately, particularly in new builds or where lines have been disrupted. Components of sensor taps are particularly susceptible to debris and will require more thorough flushing than a standard plumbing fixture. Failure to flush lines adequately will result in blocked or leaking valves (check/solenoid) or a dripping tap soon after installation and is not covered by the Enviro-Tech warranty.

TECHNICAL SPECIFICATION


| | |
|-----------------------|-------------------------------------------------------------|
| Function | Elite Tapware Bench Mounted |
| Power Input | DC: 6V (4X1.5V AA alkaline batteries) AC:220-240V (50/60Hz) |
| Power Consumption | <0.3MW |
| Power Supply | 4 AA alkaline batteries or transformer |
| Water Pressure | 100kPa-500kPa |
| Inlet/outlet Diameter | 15mm 1/2G |
| Detection Zone | Self adjusting |
| Confirmation Time | 1 second |

TAP PARTS

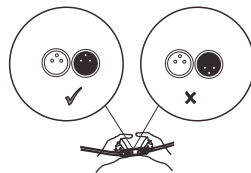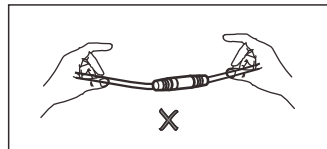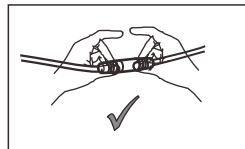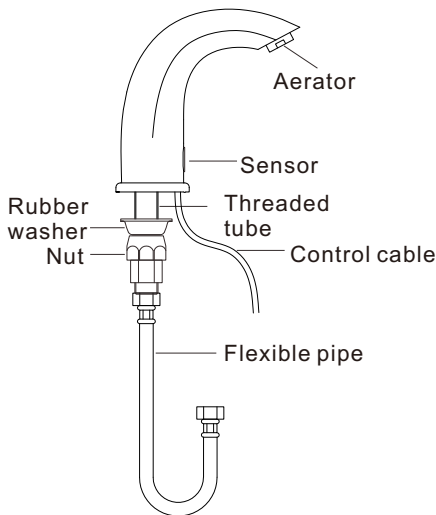


Attention:
Hold the plug not the wire to connect and disconnect and make sure the pins align to the holes in the right position.

BATTERY INSTALLATION

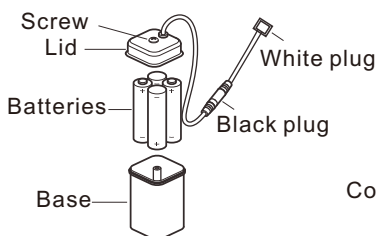


WARNING:
Carefully unplug the black battery plugs, if the battery box cable is pulled the main power white plug can be pulled out from the control box. This will result in the control box not functioning.


CONTROL BOX PARTS

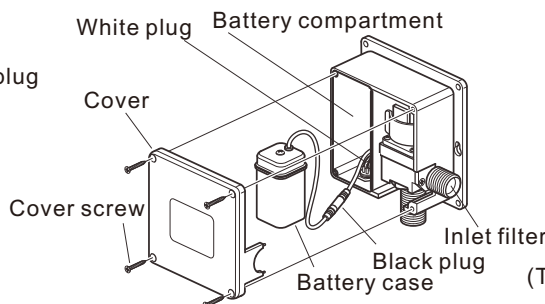


TRANSFORMER

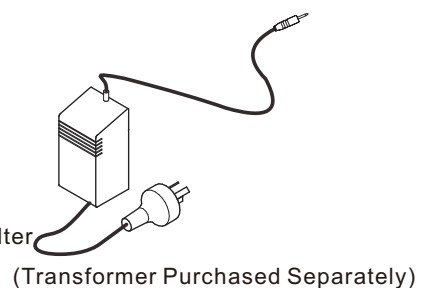

1

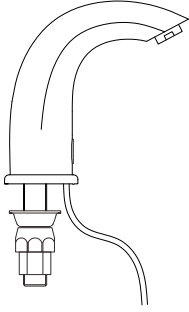


2

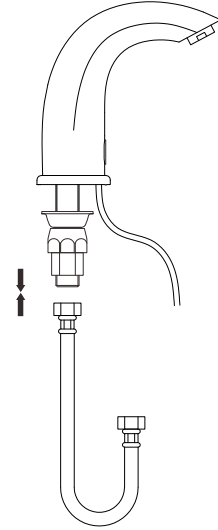


Screw the flexihose on to the bottom of the threaded tube, hand tighten only.

3

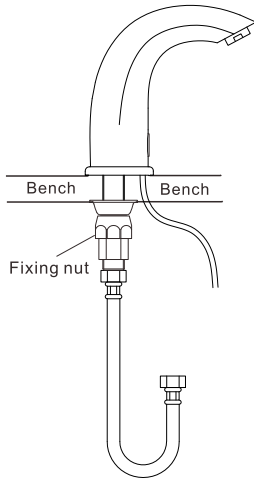


Tighten the fixing nut to secure tap to bench top (do not over tighten as this may damage bench top) Do not tighten the threaded tube.

4

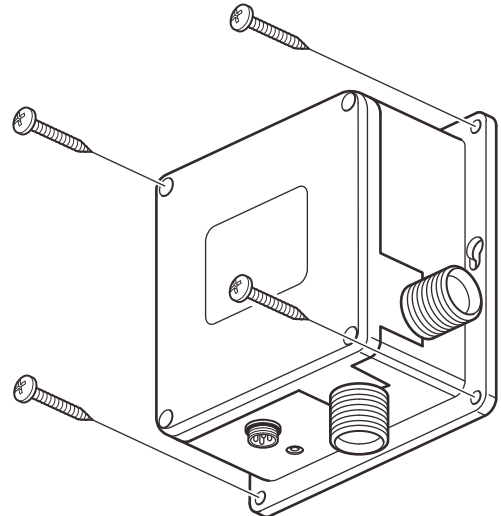


Screw control box in a suitable position under the basin making sure flexihose and control cable can reach.

5

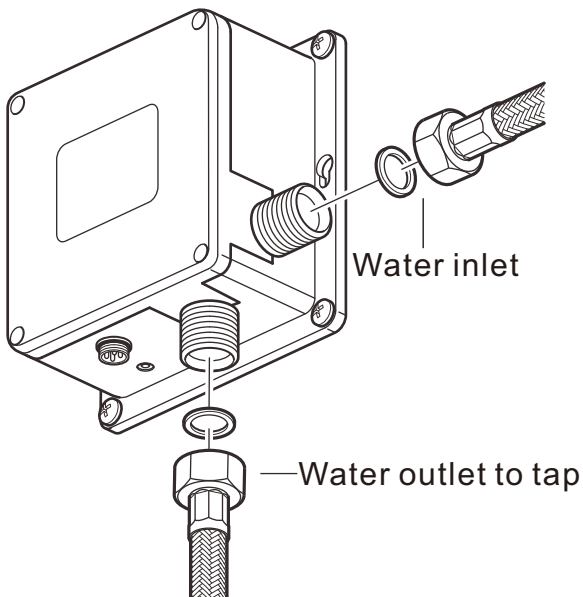

Make sure that the rubber washers are in place in the flexihoses.

6

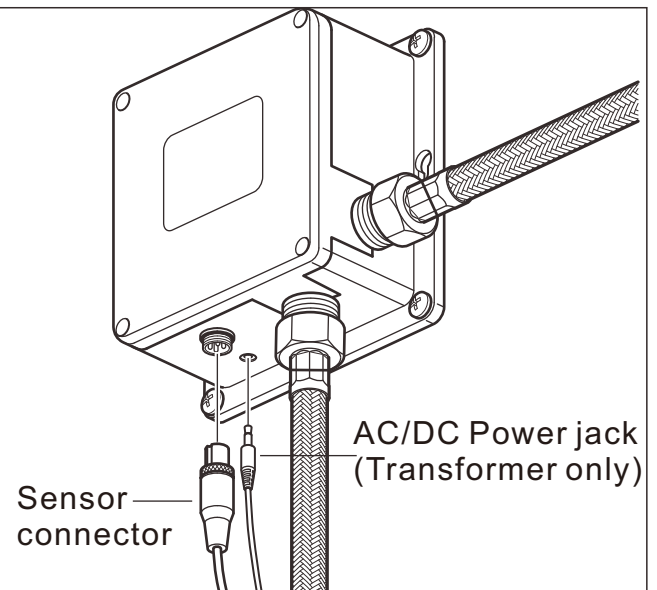

Hold the plug not the wire to connect and disconnect.

TROUBLE SHOOTING

| Problem | Possible Cause | Solution |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No water out or water will not turn off | Most common: No water supply/No Power Sensor obstructed | <ul style="list-style-type: none">• Check water and power supply, change batteries.• Unplug all cables, leave unplugged for 5 minutes and reconnect everything carefully. Clean sensor |
| Too little water flow | Low water pressure/pressure is turned down The filter or solenoid is dirty | Adjust/raise the pressure Clean the filter. Clean/replace solenoid |
| Too much water flow | Water pressure is too high | Adjust pressure |
| Indicator light is off/flashing | Batteries are flat Bad connection | Replace batteries Check connections |
| Tap is self-activating | All infra-red technology can be affected by strong or directional light, reflective surfaces or high-viz clothing. This is due to environmental factors and is not a product fault. | |

For detailed troubleshooting advice, see the Installation page of our websites enviro-tech.com.au or enviro-tech.co.nz or call us on the numbers below.



WARRANTY

Enviro-Tech warrants that all tap bodies and standard chrome finish be guaranteed for 5 years from the date of purchase. All non-standard finishes are guaranteed for 2 years from the date of purchase with a 12 month repair or replacement warranty on all other products and parts. For full details of the warranty conditions, see the Warranty page of our websites.

AFTERCARE

Whilst advanced plating techniques are used in the manufacture of this product. The surface will be affected if cleaned incorrectly. Surfaces should be maintained using a clean damp cloth, no abrasive agents or materials should be used or come into contact with the surface finish, or this will invalidate your warranty.

This Enviro-Tech product is manufactured strictly to adhere to the ISO9001 standard, WaterMark certification and WELS standards. Enviro-tech reserves the right to update product technology at any time.

Contact Info:

Australia – 1300 530 883 or info@enviro-tech.com.au

New Zealand – 0800 2 ENVIRO or info@enviro-tech.co.nz